

**sollysta Printed Products**

**PRINTED FUSED SPUR OPTIONS**

<b>Part Number</b>	<b>Description</b>
WMSSU83	13A FCU SWITCHED
WMSSU83/BO	13A FCU SWITCHED MARKED BOILER
WMSSU83/DW	13A FCU SWITCHED MARKED DISHWASHER
WMSSU83/EF	13A FCU SWITCHED MARKED EXTRACT FAN
WMSSU83/FF	13A FCU SWITCHED MARKED FRIDGE FREEZER
WMSSU83/FRE	13A FCU SWITCHED MARKED FREEZER
WMSSU83/FRI	13A FCU SWITCHED MARKED FRIDGE
WMSSU83/HTR	13A FCU SWITCHED MARKED HEATER
WMSSU83/HTG	13A FCU SWITCHED MARKED HEATING
WMSSU83/TD	13A FCU SWITCHED MARKED TUMBLE DRYER
WMSSU83/WM	13A FCU SWITCHED MARKED WASHING MACHINE
WMSSU83FO	13A FCU SWITCHED WITH FLEX OUTLET
WMSSU83FO/BO	13A FCU SWITCHED WITH FLEX OUTLET MARKED BOILER
WMSSU83FO/DW	13A FCU SWITCHED WITH FLEX OUTLET MARKED DISHWASHER
WMSSU83FO/EF	13A FCU SWITCHED WITH FLEX OUTLET MARKED EXTRACT FAN
WMSSU83FO/FF	13A FCU SWITCHED WITH FLEX OUTLET MARKED FRIDGE FREEZER
WMSSU83FO/FRE	13A FCU SWITCHED WITH FLEX OUTLET MARKED FREEZER
WMSSU83FO/FRI	13A FCU SWITCHED WITH FLEX OUTLET MARKED FRIDGE
WMSSU83FO/HTR	13A FCU SWITCHED WITH FLEX OUTLET MARKED HEATER
WMSSU83FO/HTG	13A FCU SWITCHED WITH FLEX OUTLET MARKED HEATING
WMSSU83FO/TD	13A FCU SWITCHED WITH FLEX OUTLET MARKED TUMBLE DRYER
WMSSU83FO/WM	13A FCU SWITCHED WITH FLEX OUTLET MARKED WASHING MACHINE
WMSSU83N	13A FCU SWITCHED WITH LIGHT INDICATOR
WMSSU83N/BO	13A FCU SWITCHED WITH LIGHT INDICATOR MARKED BOILER
WMSSU83N/DW	13A FCU SWITCHED WITH LIGHT INDICATOR MARKED DISHWASHER
WMSSU83N/EF	13A FCU SWITCHED WITH LIGHT INDICATOR MARKED EXTRACT FAN
WMSSU83N/FAN	13A FCU SWITCHED WITH LIGHT INDICATOR MARKED FAN
WMSSU83N/FRE	13A FCU SWITCHED WITH LIGHT INDICATOR MARKED FREEZER
WMSSU83N/FRI	13A FCU SWITCHED WITH LIGHT INDICATOR MARKED FRIDGE
WMSSU83N/HTG	13A FCU SWITCHED WITH LIGHT INDICATOR MARKED HEATING
WMSSU83N/HB	13A FCU SWITCHED WITH LIGHT INDICATOR MARKED HOB
WMSSU83N/TD	13A FCU SWITCHED WITH LIGHT INDICATOR MARKED TUMBLEDRYER
WMSSU83N/WM	13A FCU SWITCHED WITH LIGHT INDICATOR MARKED WASHING M/C
WMSSU83FON	13A FCU SWITCHED WITH LIGHT INDICATOR AND FLEX OUTLET
WMSSU83FON/BO	13A FCU SWITCHED WITH LIGHT INDICATOR AND FLEX OUTLET MARKED BOILER
WMSSU83FON/DW	13A FCU SWITCHED WITH LIGHT INDICATOR AND FLEX OUTLET MARKED DISHWASHER
WMSSU83FON/EF	13A FCU SWITCHED WITH LIGHT INDICATOR AND FLEX OUTLET MARKED EXTRACT FAN
WMSSU83FON/FAN	13A FCU SWITCHED WITH LIGHT INDICATOR AND FLEX OUTLET MARKED FAN
WMSSU83FON/FRE	13A FCU SWITCHED WITH LIGHT INDICATOR AND FLEX OUTLET MARKED FREEZER
WMSSU83FON/FRI	13A FCU SWITCHED WITH LIGHT INDICATOR AND FLEX OUTLET MARKED FRIDGE
WMSSU83FON/HTG	13A FCU SWITCHED WITH LIGHT INDICATOR AND FLEX OUTLET MARKED HEATING
WMSSU83FON/HB	13A FCU SWITCHED WITH LIGHT INDICATOR AND FLEX OUTLET MARKED HOB
WMSSU83FON/TD	13A FCU SWITCHED WITH LIGHT INDICATOR AND FLEX OUTLET MARKED TUMBLEDRYER
WMSSU83FON/WM	13A FCU SWITCHED WITH LIGHT INDICATOR AND FLEX OUTLET MARKED WASHING M/C

**PRINTED 20A SWITCH OPTIONS**

<b>Part Number</b>	<b>Description</b>
WMDP84	20A DOUBLE POLE SWITCH
WMDP84/FRE	20A DP SWITCH MARKED FREEZER
WMDP84/FRI	20A DP SWITCH MARKED FRIDGE
WMDP84/TD	20A DP SWITCH MARKED TUMBLE DRYER
WMDP84/WM	20A DP SWITCH MARKED WASHING MACHINE
WMDP84N	20A DOUBLE POLE SWITCH WITH LIGHT INDICATOR
WMDP84N/DW	20A DP SW. WITH LIGHT INDICATOR MARKED DISHWASHER
WMDP84N/FAN	20A DP SW. LIGHT INDICATOR MARKED FAN
WMDP84N/FRE	20A DP SW. LIGHT INDICATOR MARKED FREEZER
WMDP84N/FRI	20A DP SW. LIGHT INDICATOR MARKED FRIDGE
WMDP84N/TD	20A DP SW. LIGHT INDICATOR MARKED TUMBLE DRYER

WMDP84N/WM	20A DP SW LIGHT INDICATOR MARKED WASHING MACHINE
WMDP85N	20A DP SWITCH WITH LIGHT INDICATOR MARKED WATERHEATER
WMDP84FO	20A DOUBLE POLE SWITCH WITH FLEX OUTLET
WMDP84FO/FRE	20A DP SWITCH WITH FLEX OUTLET MARKED FREEZER
WMDP84FO/FRI	20A DP SWITCH WITH FLEX OUTLET MARKED FRIDGE
WMDP84FO/TD	20A DP SWITCH WITH FLEX OUTLET MARKED TUMBLE DRYER
WMDP84FO/WM	20A DP SWITCH WITH FLEX OUTLET MARKED WASHING MACHINE
WMDP84FON	20A DOUBLE POLE SWITCH WITH LIGHT INDICATOR & FLEX OUTLET
WMDP84FON/DW	20A DP SW. WITH LIGHT INDICATOR & FLEX OUTLET MARKED DISHWASHER
WMDP84FON/FAN	20A DP SW. LIGHT INDICATOR & FLEX OUTLET MARKED FAN
WMDP84FON/FRE	20A DP SW. LIGHT INDICATOR & FLEX OUTLET MARKED FREEZER
WMDP84FON/FRI	20A DP SW. LIGHT INDICATOR & FLEX OUTLET MARKED FRIDGE
WMDP84FON/TD	20A DP SW. LIGHT INDICATOR & FLEX OUTLET MARKED TUMBLE DRYER
WMDP84FON/WM	20A DP SW LIGHT INDICATOR & FLEX OUTLET MARKED WASHING MACHINE
WMDP85FON	20A DP SWITCH WITH LIGHT INDICATOR & FLEX OUTLET MARKED WATERHEATER

#### 50A SWITCH

Part Number	Description
WMDP50N	50A DP SWITCH 1 GANG WITH LIGHT INDICATOR
WMDP50N/CK	50A DP SWITCH WITH LIGHT INDICATOR MARKED COOKER
WMDP50N/HB	50A DP SWITCH WITH LIGHT INDICATOR MARKED HOB
WMDP50N/OV	50A DP SWITCH WITH LIGHT INDICATOR MARKED OVEN
WMDP50N/SH	50A DP SWITCH WITH LIGHT INDICATOR MARKED SHOWER
WMDP50VN	50A DP SWITCH 2G VERTICAL WITH LIGHT INDICATOR
WMDP50VN/CK	50A DP SWITCH 2GV WITH LIGHT INDICATOR MARKED COOKER
WMDP50VN/HB	50A DP 2GVSWITCH WITH LIGHT INDICATOR MARKED HOB
WMDP50VN/OV	50A DP SWITCH 2GV WITH LIGHT INDICATOR MARKED OVEN

#### WHITE 20A GRID SWITCHES

Part Number	Description
WMGSDP2/CHD	20A 1 WAY DP MKD COOKER HOOD
WMGSDP2/DW	20A 1 WAY DP MKD DISH WASHER
WMGSDP2/EF	20A 1 WAY DP MKD EXTRACT FAN
WMGSDP2/FF	20A 1 WAY DP MKD FRIDGE FREEZER
WMGSDP2/FRE	20A 1 WAY DP MKD FREEZER
WMGSDP2/FRI	20A 1 WAY DP MKD FRIDGE
WMGSDP2/HB	20A 1 WAY DP MKD HOB
WMGSDP2/HTG	20A 1 WAY DP MKD HEATING
WMGSDP2/MW	20A 1 WAY DP MKD MICROWAVE
WMGSDP2/TD	20A 1 WAY DP MKD TUMBLE DRYER
WMGSDP2/WD	20A 1 WAY DP MKD WASTE DISPOSAL
WMGSDP2/WM	20A 1 WAY DP MKD WASHING MACHINE
WMGSDP2/OV	20A 1 WAY DP SWITCH MKD OVEN
WMGSDP2/WC	20A 1 WAY DP SWITCH MKD WINE COOLER
WMGSDP2/HW	20A 1 WAY DP SWITCH MKD HOT WATER
WMGSDP2/CM	20A 1 WAY DP SWITCH MKD COFFEE MAKER
WMGSDP2/HD	20A 1 WAY DP SWITCH MKD HOT DRAWER
WMGSDP2/FB	20A 1 WAY DP SWITCH MKD FAN BOOST

#### BLACK 20A GRID SWITCHES

Part Number	Description
WMGSDPB/DW	20A 1W DP SWITCH MARKED DISHWASHER BLACK
WMGSDP2B/EF	20A 1W DP SWITCH MARKED EXTRACT FAN BLACK
WMGSDP2B/FF	20A 1W DP SWITCH MARKED FRIDGE FREEZER BLACK
WMGSDP2B/FRE	20A 1W DP SWITCH MARKED FREEZER BLACK
WMGSDP2B/FRI	20A 1W DP SWITCH MARKED FRIDGE BLACK
WMGSDP2B/HB	20A 1W DP SWITCH MARKED HOB BLACK
WMGSDP2B/HTG	20A 1W DP SWITCH MARKED HEATING BLACK
WMGSDP2B/MW	20A 1W DP SWITCH MARKED MICROWAVE BLACK
WMGSDP2B/TD	20A 1W DP SWITCH MARKED TUMBLE DRYER BLACK
WMGSDP2B/WD	20A 1W DP SWITCH MARKED WASTE DISPOSAL BLACK
WMGSDP2B/WM	20A 1W DP SWITCH MARKED WASHING MACHINE BLACK
WMGSDP2B/OV	20A 1 WAY DP SWITCH MKD OVEN BLACK
WMGSDP2B/WC	20A 1 WAY DP SWITCH MKD WINE COOLER BLACK

WMGSDP2B/HW	20A 1 WAY DP SWITCH MKD HOT WATER BLACK
WMGSDP2B/CM	20A 1 WAY DP SWITCH MKD COFFEE MAKER BLACK
WMGSDP2B/HD	20A 1 WAY DP SWITCH MKD HOT DRAWER BLACK
WMGSDP2B/FB	20A 1 WAY DP SWITCH MKD FAN BOOST BLACK

KEY SWITCHES	
Part Number	Description
WMGKS/EL	20A DP KEY SWITCH PRINTED 'EMG LTG TEST'
WMGKSB/EL	20A DOUBLE POLE KEY SWITCH MARKED 'EMG LTG TEST' BLACK